



1. Set up truck to receive water by connecting hose to the 80mm male camlock fitting at the fill station.
2. Unlock cabinet using the orange bi-lock key.
3. **HOLD** silver **FOB** key against Key Reader until “**Select**” light turns on.
4. If key is invalid – invalid light will come on.

If this occurs, please contact:

Unitywater – 1300 086 489 – 8.30 am to 5.00 pm

5. Press **START** to commence water flow.
6. Press **OFF** to stop flow when truck tank is full.
7. Relock cabinet.
8. Turn off valve on truck and open drain valve on fill station outlet to drain hose.
9. Remove hose when empty and shut drain valve.